


Instructions for use

MWL1063

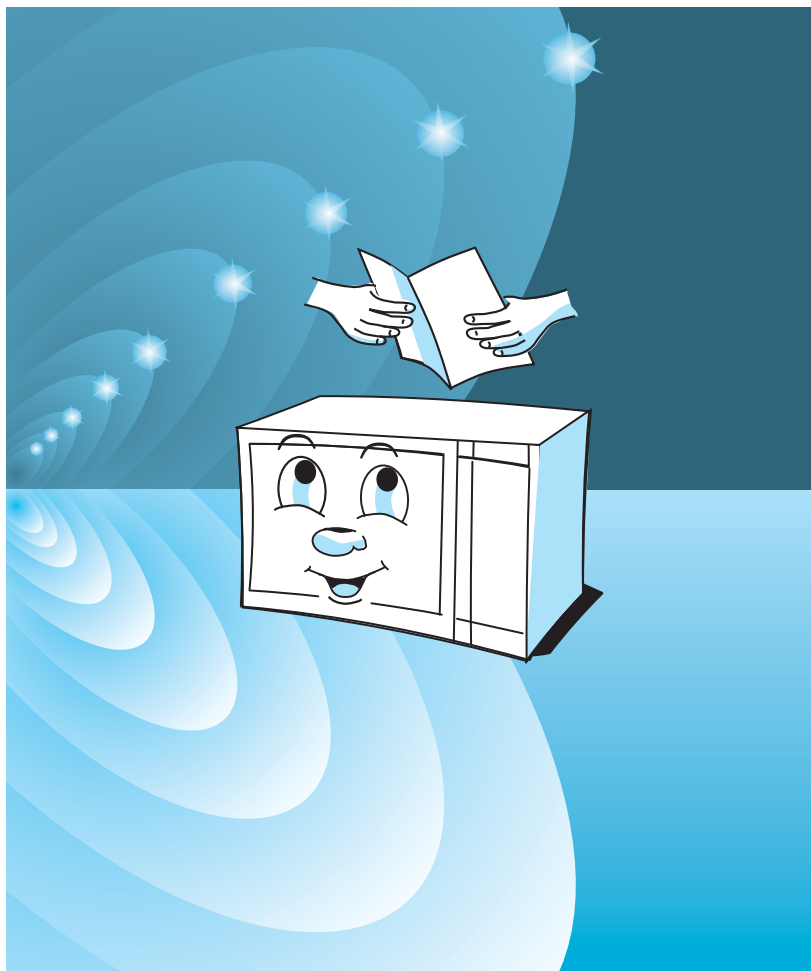

Microwave Oven

INSTRUCTION MANUAL

Model:MWL1063

Read these instructions carefully before using your microwave oven, and keep it carefully.

If you follow the instructions, your oven will provide you with many years of good service.

SAVE THESE INSTRUCTIONS CAREFULLY

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

Specifications

Model:	MWL1063
Rated Voltage:	220V-230V / 50Hz
Rated Input Power(Microwave):	1450W
Rated Output Power(Microwave):	900W
Rated Input Power(Grill):	1000W
Oven Capacity:	25L
Turntable Diameter:	Ø315mm
External Dimensions:	485x410x287mm
Net Weight:	Approx. 13.2 kg

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. **Warning:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
2. **Warning:** It is hazardous for anyone other than a competent person to remove a cover which gives protection against exposure to microwave energy.
3. **Warning:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understand the hazards of improper use.
4. **Warning:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated. (only for grill series)
5. Only use utensils suitable for use in microwave ovens.
6. The oven should be cleaned regularly and any food deposits should be removed.
7. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
9. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
10. Do not overcook food.
11. Do not use the oven cavity for storage purposes. Do not store items, such as bread, cookies, etc. inside the oven.
12. Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
13. Install or locate this oven only in accordance with the installation instructions provided.
14. Eggs in the shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
15. Use this appliance only for its intended uses as described in manual. Do not use corrosive chemicals or vapors in this appliance. This oven is especially designed to heat. It is not designed for industrial or laboratory use.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. Do not store or use this appliance outdoors.
18. Do not use this oven near water, in a wet basement or near a swimming pool.
19. The temperature of accessible surfaces may be high when the appliance is operating. The surfaces are liable to get hot during use. Keep cord away from heated surface, and do not cover any vents on the oven.
20. Do not let cord hang over edge of table or counter.
21. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
22. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
23. Microwave heating of beverages can result in delayed eruptive boiling, therefore take care when handling the container.
24. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
25. Children should be supervised to ensure that they do not play with the appliance.

26. The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.
27. Appliances are not intended to be operated by means of an external timer or separate remote-control system.
28. The door or the outer surface may get hot when the appliance is operating.
29. The rear surface of appliance shall be placed against a wall.

To Reduce the Risk of Injury to Persons

Grounding Installation

DANGER

Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING

Electric Shock Hazard


Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the inside of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.

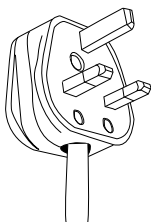

CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

UTENSILS

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven." There may be certain non-metalic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. **Do not exceed 1 minute cooking time.**

Materials you can use in microwave oven

Utensils	Remarks
Aluminum foil	Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 2.5cm away from oven walls.
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 5mm above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven


Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

SETTING UP YOUR OVEN


Names of Oven Parts and Accessories

Remove the oven and all materials from the carton and oven cavity.
Your oven comes with the following accessories:

- Glass tray 1
- Turntable ring assembly 1
- Instruction Manual 1

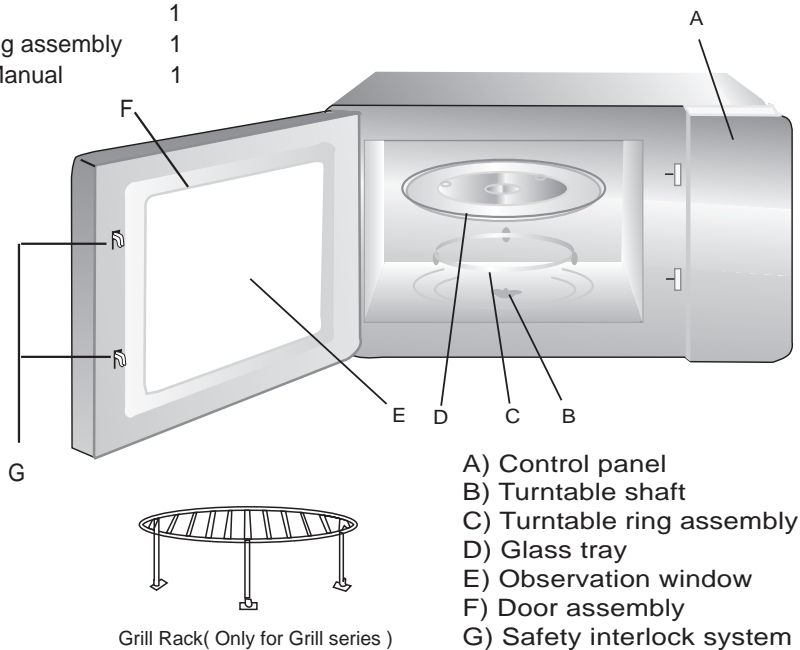

Turntable Installation

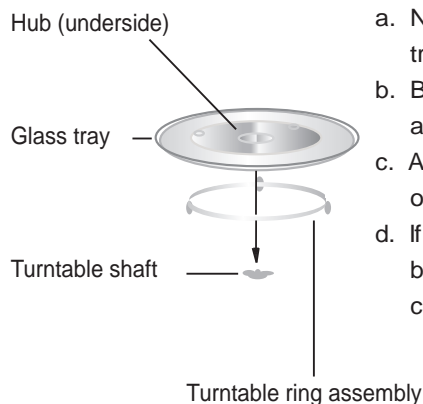

- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

Countertop Installation


Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface.

Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

Installation

1. Select a level surface that provide enough open space for the intake and/or outlet vents.

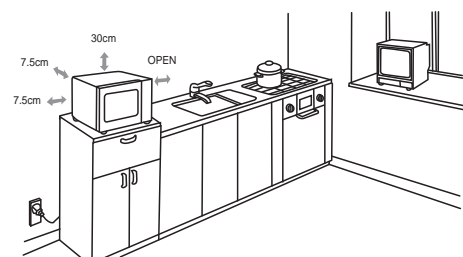

A minimum clearance of 7.5cm is required between the oven and any adjacent walls. One side must be open.

- (1) Leave a minimum clearance of 30cm above the oven.
- (2) Do not remove the legs from the bottom of the oven.

- (3) Blocking the intake and/or outlet openings can damage the oven.
 - (4) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.
2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.


WARNING: Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

The accessible surface may be hot during operation.



OPERATION

Control Panel and Features

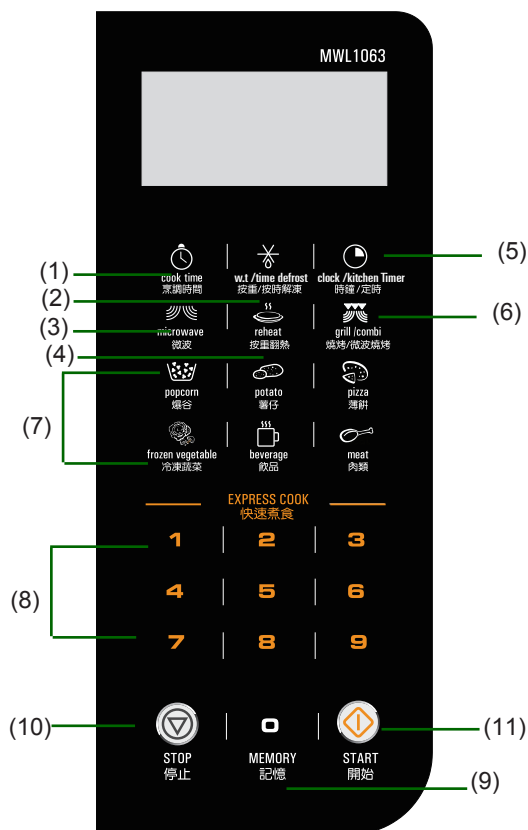

- (1) cook time
- (2) w.t./time defrost
- (3) microwave
- (4) reheat
- (5) clock/kitchen timer
- (6) grill/combi.
- (7) auto menu
- (8) number buttons
- (9) Memory
- (10) Stop
- (11) Start

OPERATION

1. Power Level

11 power levels are available.

Level	10	9	8	7	6	5	4	3	2	1	0
Power	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%	0%
Display	PL10	PL9	PL8	PL7	PL6	PL5	PL4	PL3	PL2	PL1	PL0

2. Clock Setting

- (1) Press "**CLOCK/KITCHEN TIMER**" once, "00:00" will display.
- (2) Press the number keys and enter the current time. For example, time is 12:10 now, please press "1,2,1,0" in turn.
- (3) Press "**CLOCK/KITCHEN TIMER**" to finish clock setting. ":" will flash and the clock will be lighted.
- (4) If the numbers input are not within the range of 1:00--12:59, the setting will be invalid until valid numbers are input.

Note: (1) In the process of clock setting, if the "**STOP**" button is pressed or if there is no operation within 1 minute, the oven will go back to the former setting automatically.

(2) If the clock need to be reset, please repeat step 1 to step 3.

3. Kitchen Timer

- (1) Press "**CLOCK/KITCHEN TIMER**" twice, LED will display 00:00, the first hour figure flash.
- (2) Press the number keys and enter the timer time. (The maximum cooking time is 99 minutes and 99 seconds)
- (3) Press "**START**" to confirm setting.
- (4) When the timer time arrives, the buzzer will ring 5 times.
If the clock be set (12-hour system), LED will display the current time.

Note: 1) The kitchen time is differ from 12-hour system, Kitchen Timer is a timer.

2) During kitchen timer, any program cannot be set.

4. Microwave cook

- (1) Press "**COOK TIME**" once, LED will display "00:00".
- (2) Press number keys to input the cooking time; the maximum cooking time is 99 minutes and 99 seconds.
- (3) Press "**MICROWAVE**" once, LED will display "PL10". The default power is 100% power.
Now you can press number keys to adjust the power level.
- (4) Press "**START**" to start cooking.

Example: to cook the food with 50% microwave power for 15 minutes.

- a. Press "**COOK TIME**" once. "00:00" displays.
- b. Press "1", "5", "0", "0" in order.
- c. Press "**MICROWAVE**" once, then press "5" to select 50% microwave power.
- d. Press "**START**" to start cooking.

Note: 1) In the process of cooking, if the "**STOP**" button is pressed or if there is no operation within 1 minute, the oven will go back to the former setting automatically.

2) If "PL0" selected, the oven will work with fan for no power. You can use this level to remove the odour of the oven.

3) During microwave cooking, "**MICROWAVE**" can be pressed to change the power you need.

After pressing "**MICROWAVE**", the current power flash for 3 seconds, now you can press number button to change the power.

The oven will work with the selected power for the rest time.

5 . Grilling Cooking

(1) Press the "**GRILL/COMBI**" button once to choose the grill function, the LED will display "G-1".

(2) Set the cooking time, the maximum cooking time is 99 minutes and 99 seconds.

Example: Set 12 minutes 50 seconds, press "1", "2", "5", "0" in order.

(3) Press "**START**" to start cooking. The cooking time counts down.

Note: If half the grill time passes, the oven pauses and sounds twice, and this is normal. You can just press "**START**" to continue cooking. But in order to have a better effect of grilling food, you should turn the food over, close the door, and then press "**START**" to continue cooking. If there is no operation in 1 minute, the oven will continue working and beep once.

6. Combination cooking (microwave + grilling)

(1) Press the "**GRILL/COMBI**" button twice or thrice to choose "Combination 1" (55%microwave+45%grill) or "Combination 2" (36%microwave+64%grill), LED will display "C-1" or "C-2".

(2) Set the cooking time, the maximum cooking time is 99 minutes and 99 seconds.

Example: Set 12 minutes 50 seconds, press "1", "2", "5", "0" in order.

(3) Press "**START**" to start cooking. The cooking time counts down.

Function	Display	Microwave Power	Grill Power
Combi.1	C-1	55%	45%
Combi.2	C-2	36%	64%

7. Speedy Cooking

- (1) In waiting state, instant cooking at 100% power level can be started by select a cooking time from 1 to 6 minutes by pressing number pads 1 to 6. Press "**START**" to increase the cooking time; the maximum cooking time is 99 minutes and 99 seconds.
- (2) In waiting state, instant cooking at 100% power level with 30 seconds' cooking time can be started by pressing "**START**". Each press on the same button will increase cooking time by 30 seconds. the maximum cooking time is 99 minutes and 99 seconds.
- (3) After pressing "TIME COOK" and the cooking time is selected, press "**START**" to start cooking with full microwave power for selected time.

Note: during microwave cooking and time defrost, time can be added by pressing "**START**" button.

8. Weight Defrost Function

- (1) Press "**W.T./TIME DEFROST**" once, LED will display "dEF1".
- (2) Press numerical buttons to input weight to be defrosted.
Input the weight ranged between 100~2000 g.
- (3) If the weight input is not within 100~2000, the input will be invalid. A "beep" will be sound and the unit will not work until valid numbers are input .
- (4) Press "**START**" to start defrosting and the cooking time remained will be displayed.

9. Time Defrost Function

- (1) Press "**W.T./TIME DEFROST**" twice, LED will display "dEF2".
- (2) Press number pads to input defrosting time. The effective time range is 00:01~99:99
- (3) The default microwave power is power level 3. If you want to change the power level, press "**MICROWAVE**" once, and the LED will display "PL 3", then press the number pad of the power level you wanted.
- (4) Press "**START**" to start defrosting. The remained cooking time will be displayed.

10. POPCORN

- a) Press "**POPCORN**" repeatedly until the number you wish appears in the display, "50", "100" grams will display in order.
For example, press "**POPCORN**" once , "50" appears.
- b) Press "**START**" to cook, buzzer will sound five times and then turn back to waiting state.

11. POTATO

- a) Press "**POTATO**" repeatedly until the number you wish appears in the display, "1", "2", "3" will display in order.
"1"SET : 1 potato (approximate 230 gram)
"2"SETS: 2 potatoes (approximate 460 gram)
"3"SETS: 3 potatoes (approximate 690 gram)
For example, press "**POTATO**" once , "1" appears.
- b) Press "**START**" to cook, buzzer sounds once.When cooking finish,buzzer sounds five times and then turn back to waiting state.

12. FROZEN VEGETABLE

- a) Press "**FROZEN VEGETABLE**" repeatedly until the number you wish appears in the display, "150", "350", "500" grams will display in order.
For example, press "**FROZEN VEGETABLE**" once , "150" appears.
- b) Press "**START**" to cook, buzzer sounds once.When cooking finish,buzzer sounds five times and then turn back to waiting state.

13. BEVERGAE

- a) Press "**BEVERAGE**" repeatedly until the number you wish appears in the display, "1", "2", "3" cup will display in order. One cup is about 120ml. For example, press "**BEVERAGE**" once , "1" appears.
- b) Press "**START**" to cook, buzzer sounds once.When cooking finish,buzzer sounds five times and then turn back to waiting state.

14. MEAT Function

A. Chicken menu

- a) Press "**MEAT**" once to choose chicken menu,"CHIC" displays.
- b) Press "**START**" to confirm the menu. "400" displays.
- c) Keep pressing "**MEAT**" to choose chicken weight."600", "800", "1000" or "1200" grams can be selected.
- d) Press "**START**" to cook, buzzer sounds once.When cooking finish,buzzer sounds five times and then turn back to waiting state.

B. BEEF menu

- a) Press "**MEAT**" twice to choose beef menu,"BEEF" displays.
- b) Press "**START**" to confirm the menu. "300" displays.
- c) Keep pressing "**MEAT**" to choose beef weight."500", "700", "900" or "1100" grams can be selected.
- d) Press "**START**" to cook, buzzer sounds once.When cooking finish,buzzer sounds five times and then turn back to waiting state.

C. PORK menu

- a) Press "**MEAT**" three times to choose pork menu, "PO" displays.
- b) Press "**START**" to confirm the menu. "150" displays.
- c) Keep pressing "**MEAT**" to choose pork weight. "300", "450", "600" or "750" grams can be selected.
- d) Press "**START**" to cook, buzzer sounds once. When cooking finish, buzzer sounds five times and then turn back to waiting state.

15. DINNER PLATE

- a) Press "**DINNER PLATE**" repeatedly until the number you wish appears in the display, "250", "350", "500" grams will display in order.
For example, press "**DINNER PLATE**" once, "250" appears.
- b) Press "**START**" to cook, buzzer sounds once. When cooking finish, buzzer sounds five times and then turn back to waiting state.

16. FROZEN PIZZA

- a) Press "**FROZEN PIZZA**" repeatedly until the number you wish appears in the display, "100", "200", "400" grams will display in order.
For example, press "**FROZEN PIZZA**" once, "100" appears.
- b) Press "**START**" to cook, buzzer sounds once. When cooking finish, buzzer sounds five times and then turn back to waiting state.

17. Multi-stage cooking

 
At most 2 stages can be set for cooking. In multi-stage cooking, if one stage is defrosting, then defrosting shall be placed at the first stage automatically.

Note: Auto cooking cannot work in the multi-stage cooking.

Example: if you want to cook with 80% microwave power for 5 minutes + 60% microwave power for 10 minutes. The cooking steps are as following:

- (1) Press "**COOK TIME**" once, then press "5", "0", "0" to set the cooking time;
- (2) Press "**MICROWAVE**" once, then press "8" to select 80% microwave power.
- (3) Press "**COOK TIME**" once, then press "1", "0", "0", "0" to set the cooking time;
- (4) Press "**MICROWAVE**" once, then press "6" to select 60% microwave power.
- (5) Press "**START**" to start cooking.

18. LOCK FUNCTION FOR CHILDREN

Lock: In waiting state, press "**STOP**" for 3 seconds, there will be a long "beep" denoting the entering into the children-lock state; meanwhile, LED will display "  ".

Lock quitting: In locked state, press "**STOP**" for 3 seconds, there will be a long "beep" denoting that lock is released.

19. MEMORY FUNCTION

- (1) Press "**0/MEMORY**" to choose memory 1-3 procedure. The LED will display 1,2,3.
- (2) If the procedure has been set, press "**START**" to use it. If not, continue to set the procedure. Only one or two stages can be set.
- (3) After finishing the setting, press "**START**" once to save the procedure and turn back to the waiting states. If press "**START**" again, it will start cooking.

Example: to set the following procedure as the second memory, that is memory 2.
to cook the food with 80% microwave power for 3 minutes and 20 seconds.

The steps are as follow:

- a. In waiting states, press "**0/MEMORY**" twice, stop pressing until the screen displays "2".
- b. Press "**COOK TIME**" once, then press "3", "2", "0" in order.
- c. Press "**MICROWAVE**" once, "PL10" display, then press "8" and "PL8" displays.
- d. Press "**START**" to save the setting. Buzzer sounds once then turn back to waiting states. If you press "**START**" again, the procedure will be saved as the memory 2 and operated.
- e. If the electricity is not cut off, the procedure will be saved all the time. If it is, the procedure need to reset.
- f. If you want to run the saved procedure, in waiting state, press "**0/MEMORY**" twice, screen displays "2", then press "**START**" to run.

20. INQUIRING FUNCTION

- (1) In cooking state, press "**CLOCK/KITCHEN TIMER**", the LED will display clock for three seconds.
- (2) In the microwave cooking state, press "**MICROWAVE**" to inquire microwave power level, and the current microwave power will be displayed.
After three seconds, the oven will turn back to the previous state. In multi-stage state, the inquiring way can be done by the same way as above.

21. COOKING END REMINDING FUNCTION

When the cooking is over, the buzzer will sound 5 "beep" to alert user the cooking is finished.

22. OTHER SPECIFICATIONS

- (1) In standby state, if the set clock digital tube displays current time, the icon ":" would flash; otherwise, it shows "0:00".
- (2) In setting function state, LED displays corresponding setting.
- (3) In working or pause state, LED displays surplus cooking time.

Trouble shooting

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.


Trouble	Possible Cause	Remedy
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.
Glass turntable makes noise when microwave oven operates	(5) Dirty roller rest and oven bottom.	Refer to "Maintenance of Microwave" to clean dirty parts.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

用户手册

MWL1063

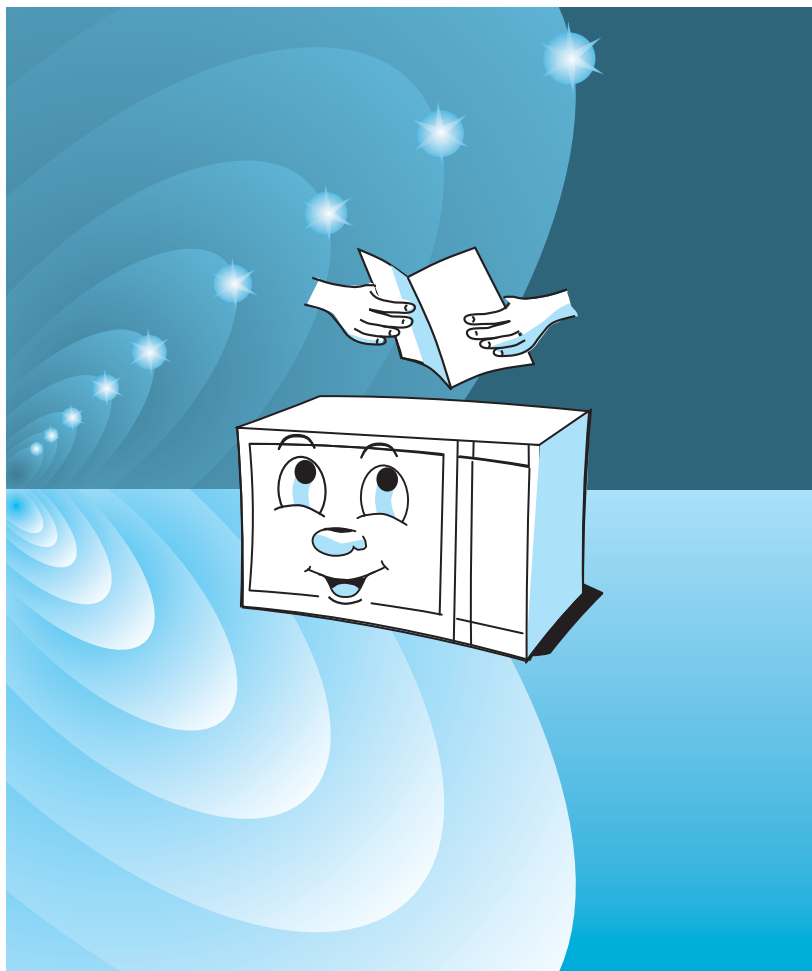

微波爐 用戶手冊

型號：MWL1063

使用微波爐之前請仔細閱讀用戶手冊，並請妥善保管。

按照說明操作可保證設備多年的使用期限。

請妥善保管

避免可能暴露于過多微波能量的注意事項：

- (a) 爐門打開時請勿實施操作，否則您可能會受微波能量的輻射傷害。請勿打破或損壞安全連鎖裝置。
- (b) 請勿在微波爐前面和爐門之間放置任何物體，或使污物或清潔劑殘留聚積在密封表面。
- (c) 警告：若爐門或爐門封條已損壞，在專業人員維修之前請勿操作。

附錄：

若設備沒有得到很好的清潔維護，其表面可能會受到侵蝕，從而影響設備的使用壽命並導致危險狀態。

規格

型號：	MWL1063
額定電壓：	220V-230V / 50Hz
額定輸入功率（微波）：	1450W
額定輸出功率（微波）：	900W
額定輸入（燒烤）	1000W
容量：	25 升
轉盤直徑：	Ø 315 毫米
外形尺寸：	485x410x287 毫米
淨重：	約 13.2 公斤

安全方面的注意事項

使用設備時，為減少火災、觸電、對人造成的傷害或暴露于過量微波能量的危險，請遵守以下基本注意事項：

1. 在微波爐中加熱飲品或清水時，即使過度加熱，甚至超過沸點，也未必會出現沸騰的氣泡，但是液體却可能會突然溢出造成燙傷。為避免發生上述情況，請遵守以下幾點：

1) 避免使用窄小瓶頸的容器。

2) 將容器放進爐內之前請先攪動液體，並將茶匙留在容器內。

3) 流質食物加熱後，請放置一段時間再加以攪動方才小心將容器從微波爐中取出。

2.警告：除專業人員外，任何擅自進行涉及到外罩拆卸的服務或維修操作均可能帶來危險。該外罩可保護使用者免受暴露于微波帶來的危害。

3.警告：只有在已經提供充分的指導以至於兒童能夠采用安全的方法使用微波爐，並且明白不正確的使用會造成為危險時，才可允許兒童在無人監控的情況下使用微波爐。

4.警告：在組合模式下操作時，由於加熱會產生高溫，故小孩只能在大人監督下才可使用該微波爐。（僅限於燒烤系列）

5.請使用適合於微波爐中使用的器皿。

6.微波爐需定期清洗，任何殘留的食物均需清理乾淨。

7.閱讀並遵從“避免可能暴露於過多微波能量的注意事項”。

8.當在塑料或紙質容器內加熱食物時，請密切注意微波爐，因為有著火的可能。

9.若發現有冒烟，請關閉或拔掉微波爐電源，保持爐門關閉狀態以便熄滅火焰。

10.請勿過度烹調食物。

11.請勿將爐腔用作儲存之用。請勿在微波爐內存放食物，比如麵包或餅乾等。

12.將紙質或塑料容器/袋放入微波爐之前，請將金屬扎帶和金屬提手取下。

13.請按照隨附安裝說明安裝或放置微波爐。

14.微波爐不能用來加熱帶殼的鮮蛋或已煮熟的蛋，因為它們在用微波加熱時甚至在加熱之後可能會發生爆炸。

15.請勿將微波爐用作說明書規定以外的其他用途。勿在器具內使用腐蝕性化學藥品或氣體。此微波爐專為加熱食物而設計，並不適於工業或實驗用途。

16.若電源軟綫損壞，則必須由製造商、服務代理或同樣具有資格的專業人員更換，以避免產生危害。

17.切勿將微波爐放置在室外或在室外使用。

18.請勿在有水附近、潮濕的地下室或泳池附近操作。

19.器具操作時，可接觸表面的溫度可能較高。使用時表面溫度會變得很燙。請將軟綫放置遠離熱表面，請勿覆蓋微波爐的任何通風口。

20. 請勿將軟綫懸挂於桌子或櫃檯的邊緣。
21. 未保持微波爐清潔可能會導致表面受到惡化損壞，影響器具的使用壽命並可能導致危險的情況發生。
22. 在嬰兒食物器皿中加熱食物或流質食物後，在喂食之前請先將食物加以攪拌並檢查溫度，確保熱力分布均勻和避免燙傷或灼傷的危險。確保加熱之前已將蓋子與奶嘴取出。
23. 此器具不適用於身體、感官或精神上有缺陷或缺少經驗和知識的人（包括兒童）使用，除非在對他們安全負責的人的監督或指導下使用。
24. 兒童使用時需有大人監督，確保他們不會將微波爐當作玩具玩。
25. 微波爐不可置於櫥櫃內，已在櫥櫃內測試過除外。
26. 微波爐不可通過外部計時器或遙控系統進行操作。
27. 警告：為避免可能的觸電，在更換燈之前，確保微波爐已關閉。
28. 使用時可接觸部位可能會變燙。小孩應遠離蒸汽。請勿使用清潔器。
29. 儲放櫃表面可能會變熱。
30. 請勿使用粗糙的擦洗劑或鋒利的金屬刮刀清洗爐門玻璃，否則可能刮傷表面，甚至導致玻璃破碎。
31. 使用過程中器具會變熱。操作時請小心謹慎，避免觸碰爐內的發熱絲。
32. 請使用推薦的溫度傳感器（因為微波爐提供有使用溫度傳感器的工具）
33. 器具背面需靠牆放置。

減少對人造成傷害的危險

接地安裝

危險

觸電危險

觸摸某些內部元件可能會造成嚴重的個人傷害甚至造成死亡。請勿擅自拆卸。

該器具必須接地。如果發生綫路短路，接地可通過為電流提供排電綫減少觸電的危險。器具附帶有一條具有接地插頭的接地綫的軟綫。該插頭需插入已正確安裝和接地的電源插座。

警告

觸電危險

接地的不正確使用可導致觸電。器具在正確安裝和接地之前請勿將其插入電源插座。

器具必須進行接地。不遵守該要求而造成對人、動物或物體的任何傷害，製造商概不負責。

 
若對接地說明不完全明白或懷疑器具是否正確接地，可諮詢合格電工或修護人員。

清洗

清洗之前，確保微波爐已與電源斷開。

1. 使用稍微濕點的濕布後，清潔微波爐內部。
2. 在肥皂水中用常規方法清洗附件。
3. 門框和封口以及附近部件變髒時，需用濕布小心清洗。

BS 三扁插頭



器皿

注意

個人傷害危險

除專業人員外，任何擅自進行涉及到外罩拆卸的服務或維修操作均可能帶來危險。該外罩可保護使用者免受暴露於微波能量帶來的危害。

參閱“微波爐中可使用與應避免的材料”的說明。其中可能有某些非金屬器皿不可用於微波加熱。如有疑問，可按以下步驟對器皿進行測試。

器皿測試：

1. 在微波專用容器中加入一杯冷水（250 毫升）以及測試器皿
2. 以最大火力烹調 1 分鐘
3. 小心觸摸下器皿。如果空器皿變熱，請勿將其用於微波烹調。
4. 烹調時間請勿超過 1 分鐘。

微波爐中可使用的材料

器皿	備注
鋁箔	僅作保護之用。可將小塊錫箔覆蓋於肉或家禽的較薄部位，以防止過度烹調。如果過於接近爐壁，可能造成錫箔擊穿。錫箔需離爐壁至少 1 英寸（2.5 厘米）。
燒烤盤	遵從廠商說明。燒烤盤底部必須在轉盤上面至少 3/16 英寸（5 毫米）。不正確的使用可能會使轉盤破裂。
餐具	僅限於微波安全型餐具。遵從廠商說明。請勿使用破裂或有缺口的盤或碟。
玻璃瓶	任何情況下均應取下蓋子。僅用於加熱食物至剛熱狀態。大多數玻璃瓶並不耐熱，可能會破裂。
玻璃器具類	僅限於耐熱微波爐專用玻璃器具。確保無金屬包邊。請勿使用破裂或有缺口的盤或碟。
烤箱袋	遵從廠商說明。請勿用金屬綫系緊，預留一些縫隙以便蒸汽溢出。
紙盤或紙杯	僅用於短時間的烹飪或加熱。烹飪時請勿離開。
生活用紙	用於覆蓋於食物進行重新加熱和吸收脂肪。僅用於有人監控的短時間烹飪。
羊皮紙	用於覆蓋食物，防止食物發生潑濺或在蒸汽加熱時用作包裹
塑料	僅限於微波安全型。遵從廠商說明。必須標示“微波安全”。某些塑料容器在裏面的食物變熱時即變軟。可煮袋和密封包裝的塑料袋須按包裝上的指示切開、刺破或開孔。
塑料保鮮膜	僅限於微波安全型。用於在烹調過程中包裹食物，以保持水分。請勿將塑料保鮮膜接觸食物。
溫度計	僅限於微波安全型。（肉和糖果溫度計）
食品蠟紙	用於覆蓋食物，防止食物發生潑濺和保持水分

微波爐中應避免的材料

器皿	備注
鋁盤	可能引起擊穿。將食物轉移至微波專用盤。
帶金屬提手的食品紙盒	可能引起擊穿。將食物轉移至微波專用盤。
金屬或金屬包邊的器皿	金屬會隔離微波能量接觸食物。金屬包邊會引起擊穿。
金屬扎口綫	可能引起擊穿和引起爐內著火。
紙袋	可能引起爐內著火。
塑料泡沫	塑料泡沫暴露於高溫時可能會溶化或污染裏面的液體。
木材	木材在微波爐中使用時會燒幹，可能會裂開或破裂。



設置微波爐

各部件和附件的名稱

從紙箱和爐腔中取下微波爐和所有材料。

微波爐隨附有以下附件：


玻璃托盤	1
轉盤圈	1
說明書	1

 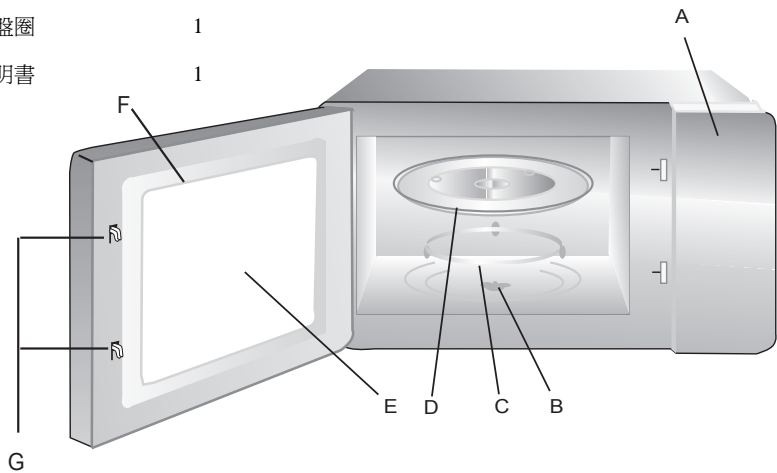

燒烤架（僅適用於燒烤系列）

- A) 控制面板
- B) 轉盤軸
- C) 轉盤圈
- D) 玻璃托盤
- E) 觀察窗口
- F) 爐門部件
- G) 安全連鎖裝置
- H) 燒烤架（僅適用於燒烤系列）

轉盤安裝

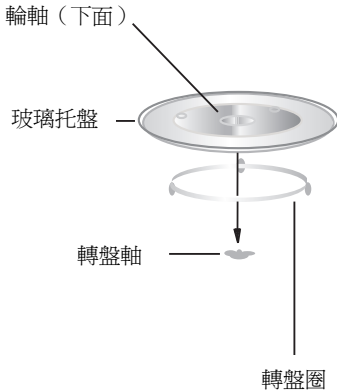

- 請勿倒置玻璃托盤。玻璃托盤須能輕鬆轉動。
- 烹飪過程中玻璃托盤和轉盤圈都必須使用。
- 烹飪時所有食物和裝食物的容器都應放置於玻璃托盤上面。
- 若玻璃托盤或轉盤圈破裂或損壞，請聯繫最近的授權服務中心。

工作臺面安裝


取下所有包裝材料和附件。

檢查微波爐是否有損壞，如凹痕或破損的爐門等。如果微波爐有損壞，請勿繼續安裝。

烤箱：取下烤箱內部表面的任何保護膜。請勿弄掉依附在爐腔上用於保護磁電管的淺褐色雲母。

安裝

- 選擇一個進氣口和/或出氣口均有足夠空間的水平面。

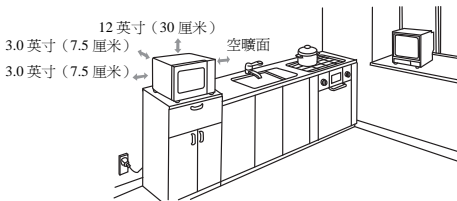

微波爐與任何相鄰牆面間的最小空隙要求為 3.0 英寸 (7.5 厘米)。其中一個面必須為空曠面。

- 微波爐上面至少留 12 英寸 (30 厘米) 的空隙。
- 請勿從微波爐底部取下支架。

- 阻塞進氣口和/或出氣口會損害微波爐。
- 微波爐應儘量遠離收音機和電視擺放。微波爐工作時會對你的收音機或電視的接收信號造成干擾。
- 請將微波爐插入標準家用電源。確保電源的電壓和頻率與銘牌標籤上標示的電壓和頻率相同。


警告：請勿將微波爐安裝於爐灶面或其他發熱電器上。若安裝於熱源附近或上面，微波爐可能會受到損壞，保證書將無效。操作過程中可接觸表面可能會變燙



設備在操作時，燒烤架上可接觸表面的溫度可能很高。

操作

控制面板和功能

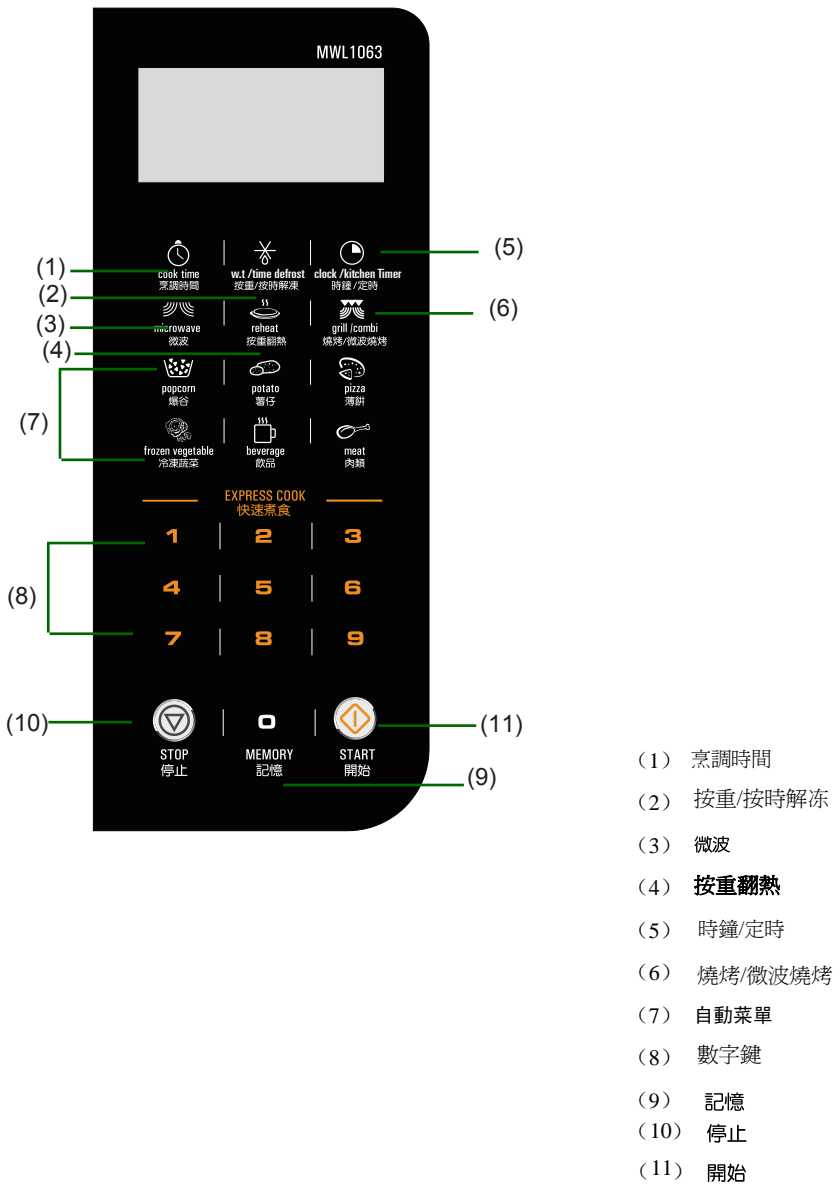

操作

1、微波火力選擇

具有 11 檔微波火力

檔	10	9	8	7	6	5	4	3	2	1	0
功率	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%	0%
顯示	PL 10	PL 9	PL 8	PL 7	PL 6	PL 5	PL 4	PL 3	PL 2	PL 1	PL 0

2、時鐘設定

- (1) 按“時鐘/定時”鍵一次，將會顯示 00:00。
- (2) 按數位鍵輸入當前時間。例如，現在是 12:10，請按順序輸入“1,2,1,0”。
- (3) 按“時鐘/定時”鍵，新時鐘被確認，設置完畢，秒閃“:”閃爍顯示，時鐘常亮顯示。
- (4) 如果所輸入時間不在 1:00--12:59 範圍內，則設置無效，直到輸入正確時間。

注：(1)．在時鐘設定過程中，若按“停止”鍵或 1 分鐘內無操作，則退出設定狀態，所作設定無效。

- (2)．若重新設置新時鐘則按照以上 (1) ~ (3) 步重新設置

3、定時

- (1) 按“時鐘/定時”鍵兩次，LED 常亮顯示 00:00，時鐘標誌閃光；
- (2) 按數字鍵輸入定時時間。(最大可設定 99 分 99 秒。)
- (3) 按“開始”鍵確認設定。
- (4) 定時時鐘到時後，蜂鳴器鳴響五聲，返回待機狀態。若先前已設定時鐘(12 小時制時鐘)，則顯示當前時間。

注：1. 烹飪時鐘不同於 12 小時制時鐘，“時鐘/定時”是一個計時器。

2. 運行過程中，不啓動任何負載。

4、微波烹調

- (1) 按“烹調時間”鍵一次，LED 常亮顯示“00:00”。
- (2) 按數字鍵輸入烹調時間，烹調時間左移顯示，最大可設定時間為 99 分 99 秒。
- (3) 按“微波”鍵一次，LED 閃爍顯示 PL10，默認火力為 PL10。現在你可以按數位鍵調整火力。
- (4) 按“開始”鍵開始烹調。

例如：選擇 15 分、50%火力烹調，具體操作方法如下：

- a.按“烹調時間”鍵一次，LED 常亮顯示“00:00”。

b.依次輸入 1、5、0、0

c.按“微波”鍵一次，LED 閃爍顯示 PL10，按數位鍵 5，蜂鳴器鳴響一聲

d.按“開始”鍵開始烹調。

注：1) 在烹調設定過程中，若按“停止”鍵或 1 分鐘內無操作，則退出設定狀態，所作設定無效。

2) 功率設置為“PL 0”時，啟動相應時間的無功率吹風功能。

3) 微波烹調過程中，可再按“微波”鍵修改火力，按“微波”鍵後，閃爍顯示當前火力 3 秒，按數字鍵修改火力，修改後閃爍顯示修改後火力 3 秒，剩餘烹調時間轉為修改後火力運行。

5、燒烤烹調

(1) 按“燒烤/微波燒烤”鍵一次，可選擇燒烤烹調，LED 顯示“G-1”。

(2) 按數字鍵輸入燒烤烹調時間，輸入數位左移顯示，最大可設定燒烤烹調時間為 99 分 99 秒。例如：設置 12 分 50 秒，請按順序輸入”1”，”2”，”5”，”0”。

(3) 按“開始”鍵開始烹調，LED 倒計時顯示剩餘烹調時間。

注：1. 當燒烤為全通時，燒烤時間過半，烹調暫停，蜂鳴器鳴叫二聲，這是正常的。你可以按“開始”繼續烹調。但是為了使燒烤功能更好，最好翻轉一下食物，關上爐門然後按“開始”繼續烹調。如果 1 分鐘內無操作，蜂鳴器將蜂鳴一聲，程式自動繼續運行。

6、組合烹調（微波+燒烤）

(1) 待機狀態下按“燒烤/微波燒烤”鍵兩次或三次，選擇“組合烹調 1”（55%微波+45%燒烤）或者“組合烹調 2”（36%微波+64%燒烤），相應顯示“C-1”或“C-2”

(2) 按數位鍵輸入組合烹調時間，輸入數位左移顯示，最大可設定組合烹調時間為 99 分 99 秒；例如：設置 12 分 50 秒，請按順序輸入”1”，”2”，”5”，”0”。

(3) 按“開始”鍵開始烹調，LED 倒計時顯示剩餘烹調時間。

功能	顯示	微波功率	燒烤功率
組合烹調 1	C-1	55%	45%
組合烹調 2	C-2	36%	64%

7、快速啟動

(1) 在待機狀態下，按數位鍵“1-6”可直接啟動相應時間的 100%微波烹調。烹調過程中可按“開始”鍵增加烹調時間，最大可設定運行時間為 99 分 99 秒。

(2) 在待機狀態，按“開始”鍵，可立即啟動 30 秒 100%微波火力烹調，每按 1 次烹調時間增加 30 秒，最大可設定運行時間為 99 分 99 秒。

(3) 按“烹調時間”鍵之後直接輸入時間，然後按“開始”鍵，可啟動相應時間的 100%微波火力烹調。

注：在微波烹調和按時解凍期間，可按“開始”鍵增加烹調時間。

8、按重解凍功能

(1) 按“按重/按時解凍”鍵一次，LED 顯示“dEF1”。

(2) 按數位鍵輸入解凍重量，輸入重量範圍 100~2000g

(3) 若輸入數位不在 100~2000g 範圍內，則微波爐無反應，蜂鳴器不響，直至輸入有效數字；

(4) 按“開始”鍵開始解凍。時間倒計時顯示。

9、按時解凍

(1) 按“按時/按時解凍”鍵兩次，LED 顯示“dEF2”；

(2) 按數位鍵輸入解凍時間，可設置時間範圍為 0：01~99：99。

(3) 默認的微波火力為 PL 3，若要修改火力，按“微波”鍵一次，閃爍顯示“PL 3”，按數位鍵輸入所需要的火力。

(4) 按“開始”，開始解凍。烹調時間倒計時顯示。

10、自動烹調功能：爆谷

(1) 重複按“爆谷”鍵直到你所需的數位出現，LED 依次顯示“50”、“100”。例如，按“爆谷”一次，顯示“50”。

(2) 按“開始”鍵烹調，蜂鳴器鳴響五聲，程式返回到待機狀態。

11、自動烹調功能：薯仔

(1) 重複按“薯仔”鍵若干次直到你需要的數位顯示，LED 依次顯示“1”、“2”、“3”。

“1”設置：1 個薯仔（大約 230 克）

“2”設置：2 個薯仔（大約 460 克）

“3”設置：3 個薯仔（大約 690 克）

例如：按“薯仔”一次，LED 顯示“1”。

(2) 按“開始”鍵開始烹調，蜂鳴器響一聲。烹調結束後，蜂鳴器鳴響五聲，程式返回到待機狀態。

12、自動烹調功能：冷凍蔬菜

(1) 重複按“冷凍蔬菜”鍵若干次直到你需要的數位顯示，LED 依次顯示“150”、“350”、“500”克。

例如：按“冷凍蔬菜”一次，LED 顯示“150”。

(2) 按“開始”鍵開始烹調，蜂鳴器響一聲。烹調結束後，蜂鳴器鳴響五聲，程式返回到待機狀態。

13、自動烹調功能：飲品

(1) 重複按“飲品”鍵若干次直到你需要的數位元顯示，LED 依次顯示“1”、“2”、“3”杯。一杯大約是 120ml。

例如：按“飲品”一次，LED 顯示“1”。

(2) 按“開始”鍵開始烹調，蜂鳴器響一聲。烹調結束後，蜂鳴器鳴響五聲，程式返回到待機狀態。

14、自動烹調功能：肉類

A、雞肉菜單

- a) 按“肉類”鍵一次選擇雞肉功能表，LED 閃爍顯示“CHIC”。
- b) 按“開始”鍵確定雞肉功能表，LED 閃爍顯示“400”。
- c) 繼續按“肉類”鍵選擇其他分量，依次顯示“600”，“800”，“1000”，“1200”克。
- d) 按“開始”鍵開始烹調，蜂鳴器響一聲。烹調結束後，蜂鳴器鳴響五聲，程式返回到待機狀態。

B、牛肉菜單

- a) 按“肉類”鍵兩次選擇牛肉功能表，LED 閃爍顯示 BEEF。
- b) 按“開始”鍵確認牛肉功能表，顯示默認分量 300。
- c) 繼續按“肉類”鍵選擇其他的分量，依次顯示“500”，“700”，“900”，“1100”克，
- d) 按“開始”鍵開始烹調，蜂鳴器響一聲。烹調結束後，蜂鳴器鳴響五聲，程式返回到待機狀態。

C、豬肉菜單

- a) 按“肉類”鍵三次選擇 PORK 功能表，LED 閃爍顯示“PO”。
- b) 按“開始”鍵確認豬肉功能表，顯示默認分量 150。
- c) 繼續按“肉類”鍵選擇其他的分量，依次顯示“300”，“450”，“600”，“750”克。
- d) 按“開始”鍵開始烹調，蜂鳴器響一聲。烹調結束後，蜂鳴器鳴響五聲，程式返回到待機狀態。

15、自動烹調功能：按重翻熱功能

- a) 重複按“按重翻熱”鍵若干次直到你需要的數位元顯示，LED 依次顯示“250”、“350”、“500”克。

例如：按“按重翻熱”一次，LED 顯示“250”。

b) 按“開始”鍵開始烹調，蜂鳴器響一聲。烹調結束後，蜂鳴器鳴響五聲，程式返回到待機狀態。

16、自動烹調功能：薄餅功能

a) 重複按“薄餅”鍵若干次直到你需要的數位元顯示，LED 依次顯示“100”、“200”、“400”克。

例如：按“薄餅”一次，LED 顯示“100”。

b) 按“開始”鍵開始烹調，蜂鳴器響一聲。烹調結束後，蜂鳴器鳴響五聲，程式返回到待機狀態。

17、多段烹調


最多可設定兩段烹調。如果多段烹調中有一段為按重解凍，則烹調開始時，自動把按重解凍當作第一段執行。

注：自動烹調不能在多段烹調功能中使用

例如：如果你想設定 5 分鐘的 80%微波功率+10 分鐘的 60%微波功率烹調，操作方法如下：


1. 按“烹調時間”鍵一次，然後按“5”，“0”，“0”設置烹調時間
2. 按“微波”鍵一次，然後按“8”選擇 80%的微波功率。
3. 按“烹調時間”鍵一次，然後按“1”“0”，“0”，“0”設置烹調時間
4. 按“微波”鍵一次，然後按“6”選擇 60%的微波功率。
5. 按“開始”鍵開始烹調。

18、童鎖功能

上电加锁：炉门关闭，通电后直接进入童锁状态，童锁标志点亮，LED 显示“”

解锁：打开炉门或按住“STOP”键 3 秒，蜂鸣器一声长“嘀”即可解锁。

自动加锁：在待机状态，若连续 1 分钟无操作，蜂鸣器一声长“嘀”，即表示

进入童锁状态，童锁标志点亮，LED 显示“”

解锁：打开炉门或按住“STOP”键 3 秒，蜂鸣器一声长“嘀”即可解锁。

19、記憶功能

(1) 待機狀態下，按“記憶”鍵 1 到 3 次選擇記憶 1 到記憶 3，LED 將顯示“1”“2”“3”；

(2) 若已經直接設定了烹調程式，按“開始”鍵，則調用已設定的記憶程式 1 到 3，否則繼續設定烹調程式。只能設置一段或兩段烹調程式。

(3) 設定完成後，按“開始”鍵一次，則存儲設定的記憶烹調程式，顯示相應的記憶數位，蜂鳴器提示一聲；若再按“開始”鍵，則運行設定的烹調程式。

例如：設置一段記憶程式(設置為第二檔記憶)：微波 80%，工作時間 3 分 20 秒

- a. 在待機狀態下按“記憶”鍵兩次，當 LED 第二位元顯示“2”時，停止按鍵。
- b. 按“烹調時間”鍵，依次按數位鍵 3、2、0，輸入烹調時間。
- c. 按“微波”鍵 LED 閃爍顯示“PL 10”時，按數字鍵“8”選擇 PL 8;
- d. 按“開始”鍵一次保存當前設定，蜂鳴器鳴響一聲後回去待機狀態。若再一次按“開始”鍵，則程式立即執行所設定的烹調程式，程式同時將設定的程式保存在第二檔記憶中。
- e. 如果沒有斷電，設定的程式將一直保存。如果斷電，程式需重新設置。
- f. 若要運行所保存的程式，在待機狀態下按“記憶”鍵兩次，當 LED 顯示“2”時，直接按“開始”鍵，則立即執行所保存的烹調程式。

20、查詢功能

(1) 在已設定時鐘狀態下，在烹調過程中按“時鐘/定時”鍵，數碼管顯示當前時鐘 3 秒，返回到烹調狀態。

(2) 在微波烹調過程中，按“微波”鍵可查詢微波火力（注：自動烹調和解凍過程中均不能查詢微波火力），LED 常亮顯示微波火力 3 秒鐘後，返回烹調時間倒計時顯示狀態。二段烹調也可按“微波”鍵查詢火力。

21、烹調結束提醒功能

烹調結束時蜂鳴器響 5 聲，提示用戶烹調完畢。

22、其他說明

- (1) 待機狀態下，若已設定時鐘數碼管顯示當前時間，“：”閃爍。否則顯示 0:00。
- (2) 功能設定狀態下，LED 數碼管顯示相應設置。
- (3) 運行和暫停狀態中，LED 數碼管顯示剩餘烹調時間。

維修保養

故障診斷與維修

下列情況均屬正常	
微波爐干擾電視信號接收	微波爐工作時，收音機和電視的信號接收可能會受到干擾。同樣會對小家電如混合器、真空吸塵器和電風扇造成干擾。均屬正常現象。
微波爐燈光暗弱	低火力烹調時，微波爐燈管可能會變暗弱，屬正常現象。
蒸汽積聚爐門，有熱風從排氣口排出	烹調時，食物中會冒出蒸汽。大多數會從排氣口排出，但一些可能會聚集在較冷的地方，比如爐門。均屬正常現象。
爐內沒有食物時微波爐意外開始操作	禁止爐內無任何食物時操作該微波爐。此操作非常危險，很可能會損壞微波爐。

故障	可能原因	解決方法
微波爐無法啟動	(1) 電源綫沒有插緊	拔下插頭，待 10 秒鐘後重插
	(2) 保險絲燒斷或斷路器工作	更換保險絲或重新設置斷路器(由本公司專業人員負責維修)
	(3) 電源插座有問題	用其他電器測試插座是否有問題
微波爐不加熱	(4) 爐門未關好	關好爐門
微波爐運行時玻璃轉盤會發出響聲	(5) 滾筒支托和微波爐底變髒	參考“微波爐的維修保養”對不潔的部件進行清洗



產品或產品隨附文件上的此標志表示本產品不可視為家庭廢棄物，相反需將其交至相應的回收點對電氣和電子設備進行回收。

如日後需要棄置，請遵循本地的廢物棄置條例。

有關產品處理，恢復使用和回收的詳細數據，請聯繫本地政府機構、家庭廢棄物處理服務機構或購買本產品的商店。

棄置前請切斷電源綫，使本產品不能連接電源。